



# TELINGA Microphones,

Parabolic microphones & other equipment for Wildlife Sound Recording.

---

## Charging of the internal accumulator:

### Models 4W, 4B, 5W and 5B

The above models are fed by a built-in cadmium free rechargeable Ni-mHy battery.

1. Run the microphone until the sound becomes poor.
2. Roll up the handle rubber foam and snap off the plastic cap at the bottom end of the handle, where the cable comes out. Do NOT twist!
3. Connect a standard 9-volt battery to the clip for 10 - 15 hours. Use this battery only once. Do not use Ni-Cad batteries.
4. Fully charged, the PRO 4 will run for 80 - 100 hours and the PRO 5 for 40 - 80 hours depending on type of microphone used.

All models can be used for recording during charging. Then use rubber bands to fasten the charge battery at the output cable.