


TELINGA microphones,

Switch positions:

Models PRO 4 / PRO 4 B / PRO 5 and PRO 5 B. ~~PRO 6~~

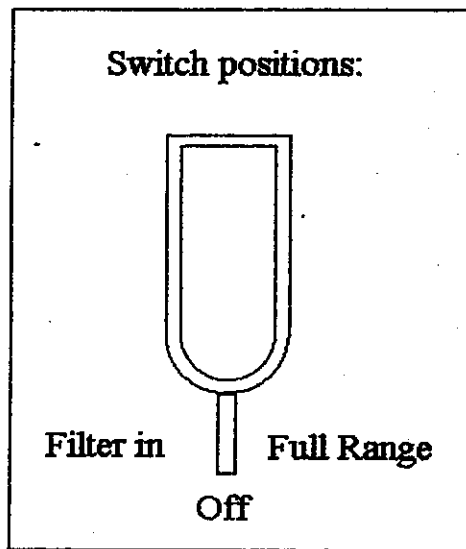

1. The "Normal setting" includes the high pass filter, and attenuates traffic and wind noise.
2. The "Full range" position is to be used when low frequencies are important.
3. To save battery, - after use, always set the switch to the "Off" position.